

# The Right Stuff Detailing


---

465 Commerce Dr. • Sunbury, OH • 43074  
Ph: (800) 405-2000 • Fax: (740) 965-8721  
Net: [www.rightstuffdetailing.com](http://www.rightstuffdetailing.com)  
[info@rightstuffdetailing.com](mailto:info@rightstuffdetailing.com)

## 64-72 A Body – w/ Booster

### Brake Line Installation

1. Begin by loosely installing the master cylinder lines into the master cylinder.
2. Hold the brass proportioning valve in position and start the threads of the master cylinder lines.
3. Bolt the bracket into place on the **inside** of proportioning valve.
4. Tighten the fittings down **after** you install the bracket.

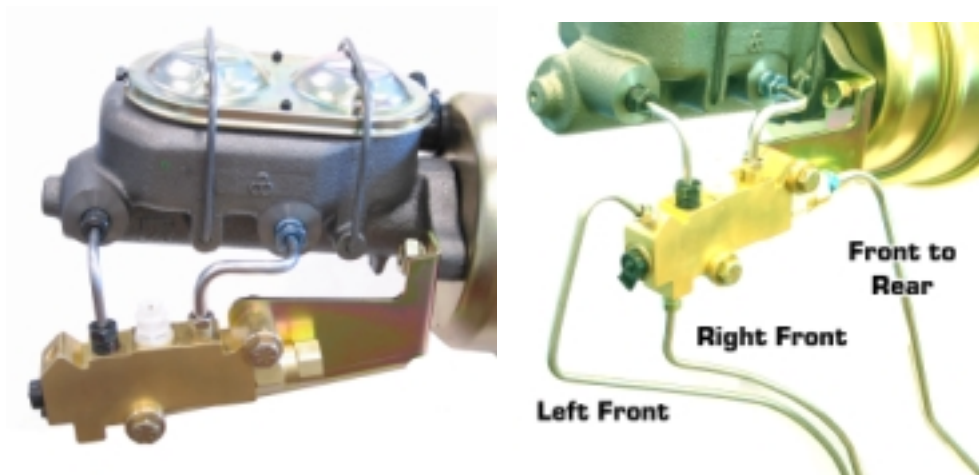

**Note:** Some master cylinder lines have loops in them. They are interchangeable with the straight lines pictured above.

5. Install the remaining lines as pictured above.

