


The Right Stuff Detailing

465 Commerce Dr. • Sunbury, OH • 43074
Ph: (800) 405-2000 • Fax: (740) 965-8721
Net: www.rightstuffdetailing.com
info@rightstuffdetailing.com

64-72 A Body – No Booster

Brake Line Installation

1. Begin by loosely installing the master cylinder lines into the master cylinder.
2. Hold the brass proportioning valve in position and start the threads of the master cylinder lines.
3. Bolt the bracket into place on the **inside** of proportioning valve.
4. Tighten the fittings down **after** you install the bracket.

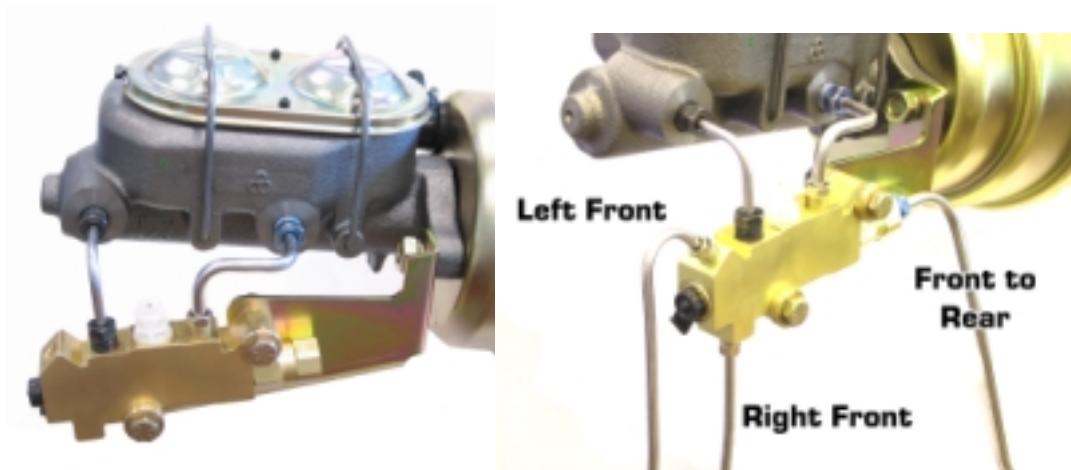

Note: Some master cylinder lines have loops in them. They are interchangeable with the straight lines pictured above.

Note: The booster in these photos was used for mock-up purposes. These instructions are for cars w/o power boosters.

5. Install the remaining lines as pictured above.

